

## USING YOUR REMOTE CONTROL

Find programs with just a few taps of the remote control. Use these quick tips to enjoy full access to your guide.

### 1 INFO

- Press 1x to Access the **On Now/On Next Banner**
- Press 2x to Display the **TV Listings Grid**
- Press 3x to Display the **Program Information Screen**

### 2 MENU

Access Parental Controls and General Setup.

### 3 VOLUME UP (↗)/DOWN (↘)

- *While watching TV:* Controls the volume of your program.
- *In TV Listings Grid:* Moves forward and backward through the grid, one program at a time.
- *In Parental Controls and General Setup:* Navigates right and left.

### 4 CHANNEL UP (↕)/DOWN (↓)

- *While watching TV:* Changes the channel while displaying the On Now/On Next Banner.
- *In TV Listings Grid:* Moves up and down through the grid, one channel at a time.
- *In Parental Controls and General Setup:* Navigates up and down.

### 5 OK

- *In TV Listings Grid:* Selecting OK on a program currently airing will tune to that channel for immediate viewing.
- *In Parental Controls and General Setup:* Activates or toggles a setting.

### 6 Number keys

- *While watching TV:* Use numbers to change channels.
- *In the TV Listings Grid:* Use numbers to get information on a particular channel.

### 7 LANG (LANGUAGE)

Access Audio Language settings.

### 8 LAST

Returns to the last screen/channel.



\* Remotes may vary by cable service provider.

## PARENTAL CONTROLS

Set viewing restrictions by channel and rating. Locked programs cannot be viewed until the assigned PIN is entered.

### Setting Up Your PIN

- 1 Press **MENU** on the Remote Control.
- 2 Press **Volume Right** (↗). A pop-up window appears asking for initial PIN setup.
- 3 Enter a 4 digit PIN of your choice.
- 4 The guide will prompt you to confirm your PIN. Once confirmed, the status column will read **Set**.



### Locking By Ratings And Channels

- 1 Press **MENU** on the Remote Control.
- 2 Press **Volume Right** (↗) to highlight the second column.
- 3 The user will be prompted to setup or enter their PIN.
- 4 Press **Channel Down** (↓) to highlight **Channels, Movie Ratings** or **TV Ratings**. The third column will populate with a rating or channel list. A lock or unlock icon will appear next to each.
- 5 Press **Volume Right** (↗) to access the third column.
- 6 Use the **Channel Up** (↕)/**Down** (↓) buttons to navigate the list.
- 7 Highlight the desired channel or rating and press **OK** to initiate the lock. The icon will change to locked.
- 8 If the lock is already set, you can press **OK** to unlock. The icon will change to unlocked.



## Rovi DTA Guide

Quick Reference Guide



800.577.2799

## WELCOME TO ROVI DTA GUIDE

 
Find what to watch quickly and explore programming right from your existing remote control! Press **INFO** to get instant information on what you are watching and move onto other screens using the guide's intuitive browsing experience.

## ON NOW/ON NEXT BANNER

Get instant information on what's currently playing and discover what's coming up next.

### Accessing What's ON NOW

- Change **Channel** (↕) / (↔) keys while watching TV, or
- Press **INFO** while watching TV

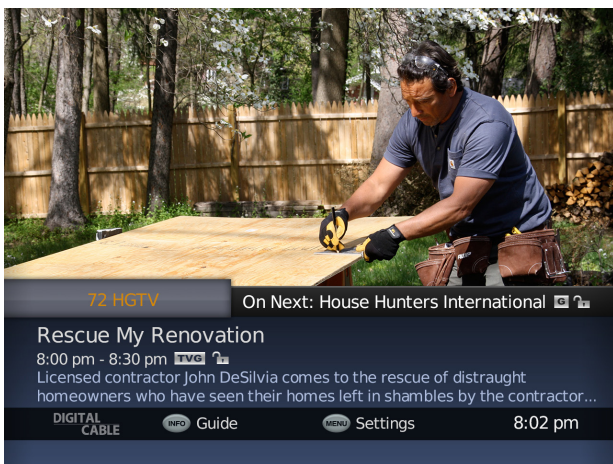

### See What's ON NEXT

 
The title of what's 'On Next' is listed in the top row, along with information about the rating and whether the title is under Parental Control.

## THE TV LISTINGS GRID

Access seven channels of TV listings at a time, with a 90 minute view of each. Browse up to 24 hours of continuous program information.

### Accessing the TV Listings Grid

- Press **INFO** from the On Now/On Next Banner
- Press **INFO** 2x while watching TV.

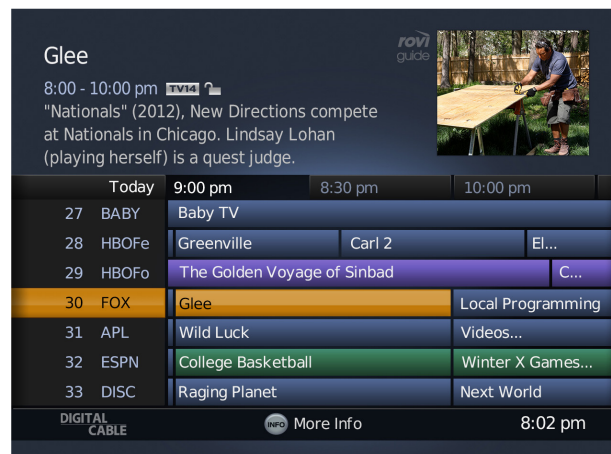

### Program Types and Colors

- **Orange** - Active Selection
- **Magenta** - Kids
- **Blue** - General Programs
- **Purple** - Movies
- **Green** - Sports

### Browsing the Channel Lineup

- 1 Access the TV Listings Grid.
- 2 Use the Channel Up (↕)/Down (↔) buttons and Volume Right (↔)/Left (↕) buttons to move through the grid one program or channel at a time.
- 3 Highlight a program and quick info will display in the upper left hand corner of the screen.

### Tuning from the TV Listings Grid

 
Highlight a program airing now and simply press **OK** on the remote control to tune to that channel.

## PROGRAM INFORMATION SCREEN

Get in-depth information on TV shows, movies, sports events and more.

### Accessing the Program Information Screen

- Press **INFO** from the TV Listings Grid

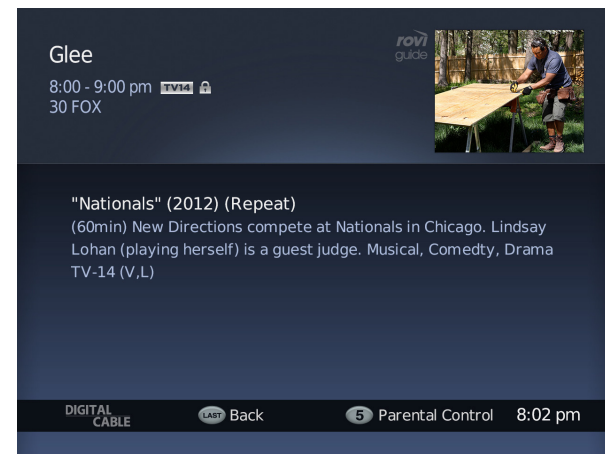

### Options

- Press **LAST** to return to the TV Listings Grid
- Press **5** to access Parental Control

## GENERAL SETUP

Use General Setup to personalize language options for menus, subtitles and audio language.

- 1 Press **MENU** on the Remote Control.
- 2 Press **Channel Down** (↔) to highlight **General Setup**.
- 3 Press **Volume Right** (↔) for options.

## AUDIO LANGUAGE SETTINGS

Use the audio language options to personalize alternate language soundtracks.

- 1 Press **LANG** on the Remote Control.
- 2 The currently selected language is shown with a check mark in the third column.
- 3 Press **Channel Up** (↕)/**Down** (↔) to navigate the list.
- 4 To change the language, select an option and press **OK**. A check mark will appear next to that option.